

Owner's Manual

ENGLISH

Cargo
Bicycle Trailer

Croozer Cargo



CROOZER[®]

IMPRINT

Publisher: Croozer GmbH
Oskar-Jäger-Str. 125
D-50825 Cologne
Germany

Copyright © 2019 Croozer GmbH. All rights reserved.
No part of this manual may be reproduced or transmitted in any form for any purpose other than the purchaser's personal use.

Additional manuals and instructions on the use of this product can be ordered from Croozer GmbH or downloaded from the website www.croozer.com. Every effort has been made to ensure the accuracy of this manual. However, if you do find an error, we would appreciate hearing about it so that we can correct it.

Planning, text, graphic design and editing:
W. Piontek, www.technik-transparent.de

Photos: W. Piontek and Croozer GmbH


Table of Contents

Description2	Cleaning, Maintaining and Storing	
What's what?	2	the Croozer Cargo	25
2-in-1 System	3	How do I clean and maintain my Croozer Cargo?	25
What is the Croozer Cargo?	4	How do I store my Croozer Cargo?	25
How should the Croozer Cargo be used?	4	Preparing the Croozer Cargo for disposal	26
How shouldn't the Croozer Cargo be used?	4		
Orientation and wording	4	Technical Data	27
Applicable standards	4		
Safety Guidelines5	Accessories	27
Symbols and warnings	5	Warranty	28
Read and observe this manual.	5		
Who can ride the towing bicycle?	5	Servicing and warranty claims.	28
Requirements for the towing bicycle	5		
Legal requirements for using a Bicycle Trailer	5		
Before your first ride...	5		
Pulling the Croozer Cargo as a Cargo Trailer	5		
The Croozer Cargo as a Handcart (accessory)	6		
Usage, storage and transport	6		
Assembly, maintenance and repair	6		
Initial Assembly and Unfolding the			
Croozer Cargo7		
Checking package contents	7		
Unfolding the Croozer Cargo.	8		
Attaching and removing the wheels	9		
Preparing the Croozer for Use as a			
Cargo Trailer	10		
Installing and removing the hitch arm	10		
Installing the axle hitch to the towing bicycle.	11		
Installing the safety flag	14		
Using Your Croozer Cargo	15		
Transporting cargo	15		
Opening and closing the cover.	16		
Hitching the Croozer to the towing bicycle	17		
Unhitching the Croozer from the towing bicycle	18		
Special considerations when riding with the Cargo			
Trailer	19		
Transporting Your Croozer Cargo	21		
Croozer Cargo Inspections and			
Maintenance.	22		
Inspection intervals	22		
Service intervals	22		
Inspecting the hitch arm, hitch connector and hitch	23		
Inspect the fabric body	23		
Inspecting and servicing the side wheels	23		
Checking tyre pressure and treads.	23		
Cleaning and lubricating the side-wheel axles	24		
Inspecting the Croozer after an accident.	24		

Description

Description

What's what?

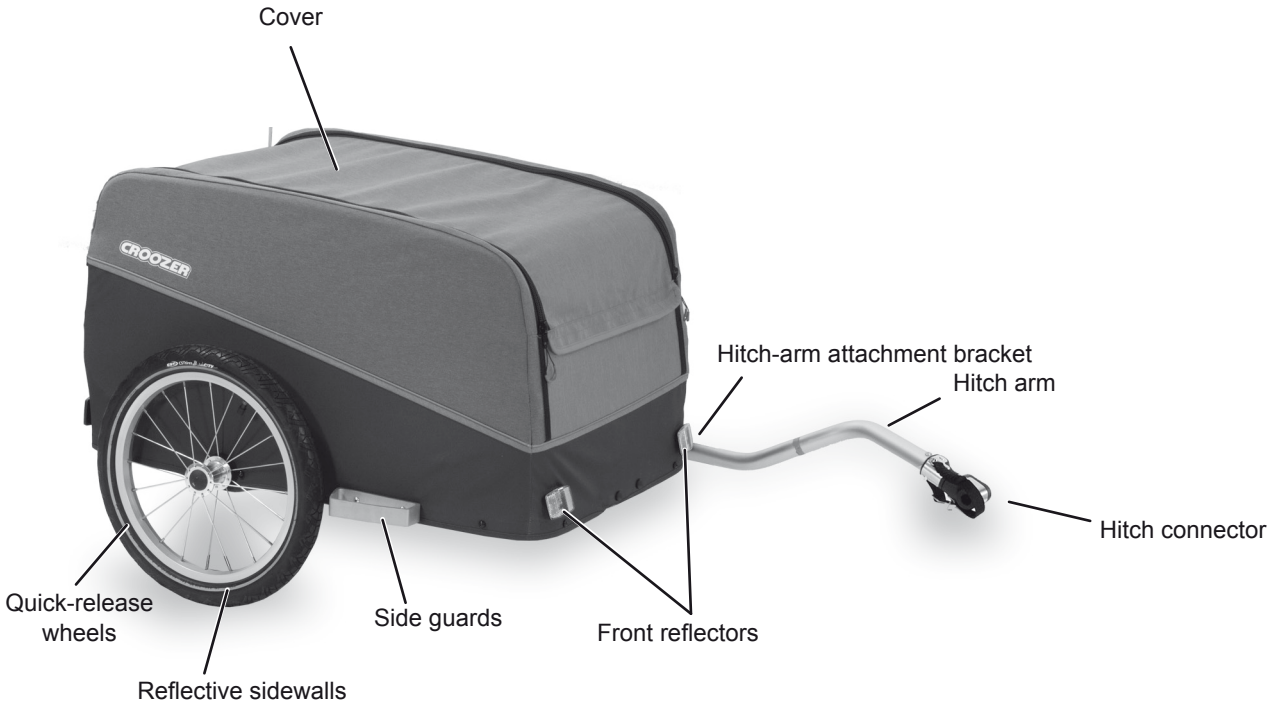

2-in-1 System



Croozer Cargo Chassis

+



Cycling Kit
safety flag,
hitch arm, hitch

=



**Croozer Cargo
Bicycle Trailer**

+

Accessory



Handcart Kit
handle,
wheel, pocket, wheel
socket

=



**Croozer Cargo
with Handcart Kit**

Click & Crooz® fastening system
Simply insert, automatic locking,
press button for removal

for hitch connector



Ball lock pin (magnetic)

for hitch-arm attachment



Description

What is the Croozer Cargo?

The Croozer Cargo is a bicycle trailer for transporting cargo. With the Handcart Kit (accessory), the Croozer Cargo can be quickly and easily converted to a Handcart.

How should the Croozer Cargo be used?

The Croozer Cargo is intended for private use for carrying cargo in daylight hours on roads and other smooth, well-surfaced paths as a Cargo Trailer or, with the Handcart Kit (available as an accessory), as a Handcart. The instructions and safety guidelines provided in this manual must be followed at all times.

Maximum Weight of Loaded Trailer (Trailer + Cargo)	50 kg (110 lb)
Maximum Load* (Cargo)	40 kg (88 lb)
Hitch-Arm Load (Nose Weight)	3 to 11 kg (6.6 – 24.3 lb)
* Weight limits only apply if the hitch-arm load is within the specified range of 3 to 11 kg (6.6 – 24.3 lb). See page 15.	

When in use as a Cargo Trailer in poor visibility conditions or at night, dusk or dawn, the Croozer Cargo must be equipped with a lighting system that complies with the applicable laws and regulations in the country of use. A battery-powered tail light can be mounted to the rear cover. Any spare parts and accessories used for the Croozer Cargo must be approved by Croozer GmbH and properly installed, ideally by a professional bicycle mechanic.

How shouldn't the Croozer Cargo be used?

The Croozer Cargo may not be used in any manner other than as specified above. Never transport children or animals in the Croozer Cargo. Never use the Handcart for jogging or skating. Commercial use, overloading, excessive speeds (of more than 25 km/h, or 15 mph, when in use as a Cargo Trailer or more than a walking speed when used as a Handcart), improper repairs and use on unsurfaced roads or paths are not permitted.

Never pull the Croozer Cargo with a motorised vehicle, such as a moped or scooter. This also applies to motorised bicycles with a maximum speed of more than 25 km/h (15 mph). Do not mount the hitch to a bicycle with a rear-wheel hub motor, unless this modification is approved by the manufacturer. Croozer GmbH will not be liable for any damages resulting from non-compliance with these requirements.

Orientation and wording

Unless otherwise indicated, the terms right and left in this manual are relative to the direction of travel.

Applicable standards

The following standards were taken into consideration:
EN 15918:2011 + A2:2017

Safety Guidelines

Symbols and warnings

**DANGER!**

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING!**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION!**

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates a situation which, if not avoided, could result in damage to the Croozer Cargo or the environment.

Tip: *In this manual, "Tip" indicates helpful advice about the use or maintenance of the Croozer Cargo.*

Read and observe this manual

This manual contains information that is extremely important for your safety and that of other road users. Therefore, it is essential that you read the entire manual carefully and follow the instructions closely. If you should experience difficulties understanding any of the information or instructions, please contact your Croozer dealer. Keep this manual handy at all times for future reference. If you loan or sell your Croozer Cargo, pass on this manual to the new user. It is also vitally important that you read and observe the instructions provided in the manual of the towing bicycle.

Who can ride the towing bicycle?

Be sure to familiarise yourself with the legal requirements in the country or state where you will be using the Croozer Cargo.

Requirements for the towing bicycle

The towing bicycle must be approved by its manufacturer for pulling a trailer. This information can be found in the owner's manual of the bicycle. Furthermore, the towing bicycle must be in perfect working order and have strong, properly functioning brakes. Motorised vehicles may not be used for pulling bicycle trailers. The only exception to this rule is a pedelec. This special type of e-bicycle has an electric motor that delivers assist only when the rider pedals. In many countries, pedelecs legally qualify as bicycles. Electric bicycles with a maximum speed of more than 45 km/h (28 mph) are officially classified as mopeds in some countries and, as such, are often not allowed to pull bicycle trailers. The towing bicycle should be equipped with a sturdy rear-mount kickstand to ensure safety when loading and unloading the trailer.

Be sure to familiarise yourself with the legal requirements that apply to towing bicycles in the country or state where you will be using the Croozer Cargo.

The towing bicycle must have a 26" to 29" (559- to 635-mm) rear wheel. This information can be found on the tyre sidewalls. The numbers 42-622, for example, indicate that the tyre has a width of 42 mm and a bead-seat diameter of 622 mm (28 inches).

Legal requirements for using a Bicycle Trailer

Be sure to familiarise yourself with the legal requirements for pulling bicycle trailers in the country or state where you will be using the Croozer Cargo.

Before your first ride...

It is vitally important that you familiarise yourself with the Croozer Cargo before you use it for transporting children. Prior to your first trip on public roads, Croozer GmbH recommends taking a practice ride in a calm, traffic-free area. This is a great way to acquaint yourself with the handling of the bicycle and the dimensions of the trailer.

Pinching hazard

When folding and unfolding the Croozer, keep fingers and hands clear of all possible pinch points (e.g. movable frame parts and locking mechanisms).

Pulling the Croozer Cargo as a Cargo Trailer

Before each ride, check the following:

- Are the wheels securely attached?
- Are the two locking mechanisms properly engaged (pins locked into the holes)?
- Is the hitch arm properly attached and secured? Is the trailer properly hitched to the towing bicycle and secured with the safety strap? Are all security pins correctly inserted and secured? Check that none of the security pins are hanging freely from their straps.
- Are the tyres inflated to the recommended pressure? The actual tyre pressure should never be higher or lower than the maximum and minimum inflation pressures marked on the tyre sidewall. (See also page 23.) Never use compressed air, e.g. from a petrol station, to inflate your tyres. The rapid airflow and high pressure can over-inflate the tyres, causing the tube and/or tyre to burst.

Turning

Always reduce your speed to a walking pace when making turns with the Cargo Trailer. Keep in mind that riding speed is often underestimated, especially on bikes with electric assist (i.e. pedelecs). When turning at high speeds, the increased centrifugal force can cause the Cargo Trailer to skid or tip over and result in accidents with serious injury or death.

Safety Guidelines

Riding downhill

Always reduce your speed when riding downhill. Riding at excessive speeds could cause the trailer to skid, which can result in accidents with serious injury or death.

Riding over kerbs or uneven surfaces

Riding over a kerb or other obstacle with only one wheel of the Cargo Trailer could cause the Croozer to tip over, resulting in accidents with serious injury or death. Empty trailers are especially susceptible to tipping. Therefore, if you have to ride over a kerb or similar obstacle, always use extreme caution and ride at very low speeds. Never use the Croozer Cargo on stairs or escalators.

Being visible to others

Never use your Croozer as a Cargo Trailer in road traffic without its safety flag mounted. The safety flag makes it easier for other road-users to see you.

If you plan to use the Croozer as a Cargo Trailer at night, dusk or dawn – or when visibility is in any way reduced – the trailer must be equipped with a fully functional lighting system. Be sure to familiarise yourself with the legal requirements of the country or region where you plan to use the Croozer.

Carrying cargo

Be sure to properly secure all cargo in the trailer to prevent it from sliding or shifting, which could impair your riding safety. Never transport objects that are too large to fit completely into the cargo area of the trailer. Never attach cargo, such as bags or panniers, to the outside of the Cargo Trailer. Cargo attached to the outside of the Croozer Cargo can drastically affect its handling and stability, potentially resulting in accidents with serious injury or death. You can carry smaller objects in the pocket inside the Cargo Trailer.

The Croozer Cargo as a Handcart (accessory)

The Croozer Cargo with the Handcart Kit (accessory) is not approved for jogging or skating. Pulling the Handcart faster than a walking pace is not permitted.

Usage, storage and transport

Never transport the Croozer Cargo – even when folded – on the roof of a motor vehicle, as this could damage the fabric body.

Never use or store the Croozer Cargo at temperatures below -20°C (-4°F).

Assembly, maintenance and repair

Purchased condition and initial assembly

If you have purchased the Croozer Cargo from a shop, the dealer should have installed the axle hitch to the towing bicycle. If you ordered your Croozer from an online or mail-order catalogue, we recommend having the initial assembly performed by a professional bicycle mechanic. Furthermore, dealers are required to provide their customers with all important information on the use of the Croozer Cargo. To find an authorised dealer in your area, visit the Croozer website at www.croozer.com.

Technical condition

Never use the Croozer Cargo if it is not in perfect working order. The Croozer Cargo must be periodically inspected for damage and/or wear to the wheels, hitch arm, frame, fabric body, security pins and axle hitch. If any of these parts are found to be damaged, the Croozer Cargo may not be used until the damage has been properly repaired, ideally by a professional bicycle mechanic.

It is critical that all maintenance work specified in this manual be performed in the specified intervals.

Using the Croozer when it is not in perfect working order can result in accidents with serious injury or death.

Proper installation and repair

The Croozer Cargo must be properly assembled to professional standards. Follow the instructions for the correct installation of the axle hitch, hitch arm and Handcart Kit (accessory). When in doubt, contact your Croozer dealer. All repairs must be carried out to professional standards using only original Croozer parts, ideally by a professional bicycle mechanic. Incorrect installation or repair work could result in accidents with serious injury or death.

Suitable accessories and original spare parts

Only use accessories and original spare parts that have been recommended and approved by Croozer GmbH. These are the only components that can be used safely with the Croozer Cargo. When in doubt, consult a Croozer dealer. The use of non-approved accessories or incompatible spare parts could result in accidents with serious injury or death. Croozer GmbH will not be liable for any damage resulting from the use of non-approved accessories or incompatible spare parts.

Changes and modifications

For safety reasons, no modifications or changes can be made to the Croozer Cargo.

Do not install additional components, such as luggage racks etc. Do not install electric drive systems. Making modifications or changes to your Croozer can result in accidents with serious injury or death. Furthermore, changes or modifications to the vehicle will void any warranty claims. Croozer GmbH will not be liable for any damage resulting from changes or modifications that have been made to the Croozer.

Initial Assembly and Unfolding the Croozer Cargo

If you have purchased the Croozer Cargo from a shop, the dealer should have installed the axle hitch to the towing bicycle and sold the Croozer "ready to use". If you ordered your Croozer from an online or mail-order catalogue, we recommend having the initial assembly performed by a professional bicycle mechanic. Furthermore, dealers are required to provide their customers with all important information on the use of the Croozer Cargo. If the initial assembly has been performed, you can skip the first few steps of this section.

If your Croozer Cargo was not assembled prior to sale, then have the initial assembly performed by a professional bicycle mechanic or follow the assembly instructions below. No tools are required for the assembly. A pair of scissors will be needed for cutting the cable ties that are used to brace the frame of the new Croozer.



WARNING!

The Croozer Cargo must be properly assembled to professional standards. Improper assembly can result in accidents with serious injury or death.

Checking package contents

The Croozer Cargo is packaged in a box for shipment. In order to minimise package size, the Croozer Cargo is shipped in its folded state (1). All of the removable parts are packed inside the Croozer Cargo.

1. Take the folded Croozer Cargo out of the box and remove all packaging materials from the Croozer and individual parts. Recycle all packaging materials if possible. It may be wise to keep the box, e.g. for storage or later transport.
2. Using a pair of scissors or other cutting tool, cut the cable ties with which the frame of the Croozer Cargo is secured and other parts are prevented from shifting.
3. Unfold the Croozer, and remove all individual parts from inside the Cargo Trailer. These parts include
 - the side wheels (2),
 - the hitch arm with axle hitch (3) and three keys,
 - a safety flag (4)
 - and this owner's manual (5).
4. Remove all packaging material from the individual parts and recycle if possible. It may be wise to keep the box, e.g. for storage or later transport.



Initial Assembly and Unfolding the Croozer Cargo

Unfolding the Croozer Cargo

1. Place the folded Cargo Trailer on a clean and stable surface.
2. Pull the two side panels (1) apart and, if necessary, reposition the fabric over the frame tubes so that the zippers face inwards and run parallel to each other.



3. Pull the rear frame tube (2) towards the back and press it into the clips (3) on both sides until you hear and feel it snap into place.
4. Pull the front frame tube (4) forwards and press it into the clips (5) until you hear and feel it snap into place.



CAUTION!

RISK OF PINCHING OR CRUSHING! There are pinch points between the frame tubes that may cause painful injuries. Use caution to avoid these points when folding or unfolding the trailer.

Tip: A new Croozer Cargo will be slightly more difficult to unfold because the canvas is still stiff.


5. Check that the front and rear frame tubes (2 and 4) are snapped fully into all four clips (3 and 5) by pulling gently inwards on the two frame tubes. There should be no movement in the frame sections when you push them together.



NOTICE

If the locking mechanisms are not properly engaged, the frame of the Croozer Cargo could collapse while riding.

6. To fold the Croozer, follow these instructions in the reverse order. Open the cover all the way, and pull the frame tubes out of all four clips (3 and 5 on both sides).

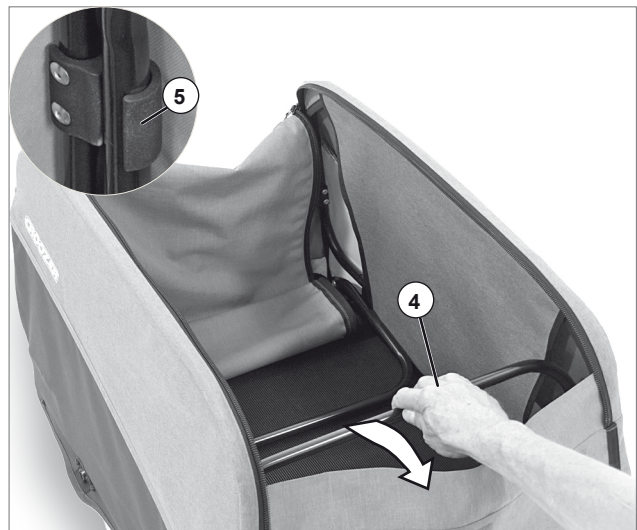

Attaching and removing the wheels

The wheels of the Croozer Cargo are equipped with push-button axles. By pressing the dust cap (1) on the wheel hub, the retaining balls (2) will retract within the axle to permit the attachment or removal of the wheel. The wheels cannot be attached or removed unless the dust cap is pressed in.



1. Remove the cardboard discs from the wheel axles. Save the discs for use when transporting the Croozer Cargo.
2. Use one hand to lift up the back of the Croozer Cargo.
3. Press the dust cap (1) of the wheel hub with the marking "PUSH".
4. Insert the wheel axle (4) into the axle receiver (5) of the Croozer Cargo as far as it will go and release the dust cap.
5. Check whether the wheel is locked securely in the axle receiver by pulling firmly on the wheel without pressing the dust cap. It should not be possible to remove the wheel without pressing on the dust cap.
6. Repeat steps 2-5 to attach the second wheel.



WARNING!

After the wheels have been attached, be sure to check that they are both locked securely in the axle receivers. This can be done by pulling on the wheels without pressing on the dust caps. It should not be possible to remove the wheels unless you are pressing on the dust caps. Wheels that are not securely locked in the axle receivers could fall off while riding, resulting in accidents with serious injury or death.

7. To remove the wheels, follow these instructions in the reverse order. Press the dust caps (1) and pull the wheels off.

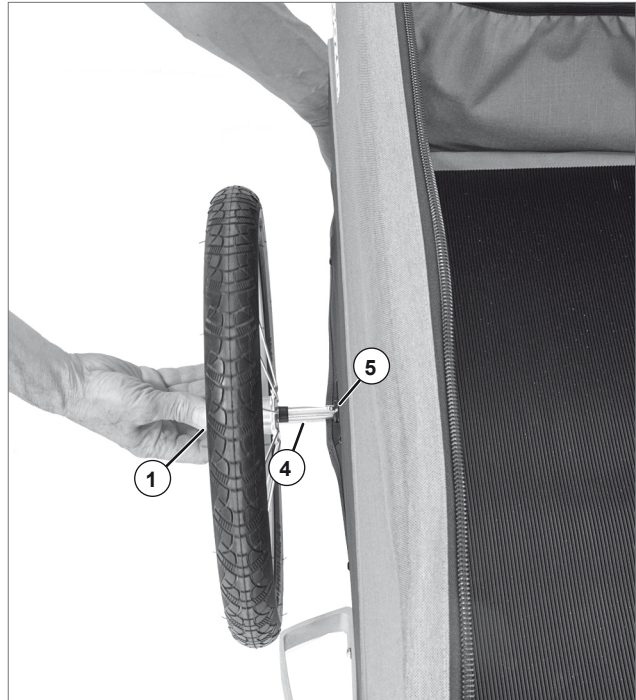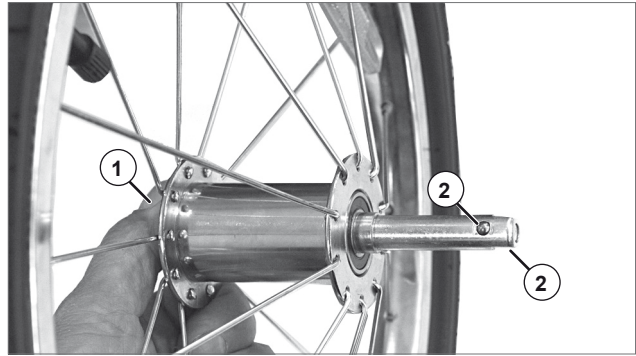

Preparing the Croozer for Use as a Cargo Trailer

Installing and removing the hitch arm

The hitch arm is installed on the front left side of the Croozer Cargo (relative to the direction of travel).

1. Raise the front of the Croozer Cargo slightly.
2. If the security pin (1) is inserted in the hitch-arm attachment bracket, pull out the security pin.
3. Hold the hitch arm (2) at an approx. 45° angle to the attachment bracket (3) and slide the end of the hitch arm (4) over the pin (5) attached to the frame of the Croozer.

NOTICE

Do not let the strap of the security pin get caught between the hitch arm and attachment bracket as this could damage the strap.

4. Pull the front of the hitch arm upwards into the hitch-arm attachment bracket, and insert the security pin (1) as far as it will go through both holes of the hitch-arm attachment bracket. The head of the security pin is magnetic and will adhere to the hitch-arm attachment bracket.







WARNING!

Always check that the security pin has been inserted as far as it will go through both holes and that it cannot fall out. If the security pin is not properly inserted, the hitch arm could fall off while in use, resulting in accidents with serious injury or death.

5. To remove the hitch arm, follow these steps in the reverse order.

NOTICE

After removing the hitch arm, always lock the security pin back into the holes in the bracket. Never leave the security pin hanging freely from its strap. It could get caught on passing objects and be pulled off, damaging parts of the vehicle.

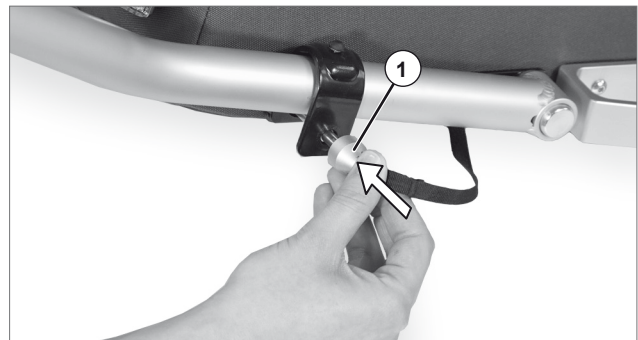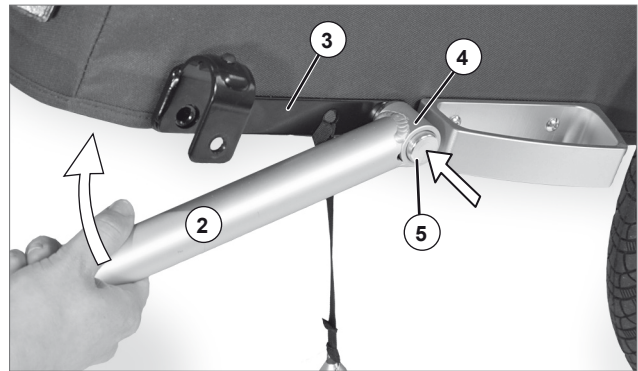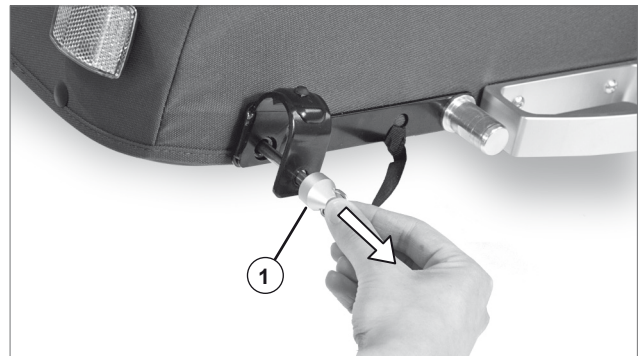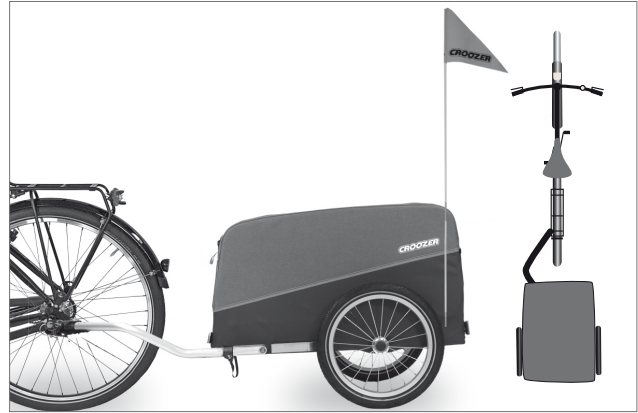

Installing the axle hitch to the towing bicycle

The hitch is always mounted to the left side of the bicycle (relative to the direction of travel) and consists of two parts: a hitch connector (1), which is mounted to the hitch arm of the Cargo Trailer, and an axle hitch (2), which must be mounted to the rear axle of the towing bicycle.

Before installing the axle hitch, you must first check whether the bicycle is approved for towing a trailer. This information can be obtained from the bicycle manufacturer, a bicycle shop or the owner's manual of the bicycle.



WARNING!


It is vitally important to confirm that the towing bicycle is approved for pulling trailers. Pulling a trailer with a bicycle that has not been approved by its manufacturer for use as a towing bicycle can result in frame breakage or other material damage. Breakages of this kind could cause accidents with serious injury or death.

If you are not completely confident about your ability to install the axle hitch correctly, please consult with, or have the installation performed by, a professional bicycle mechanic.



WARNING!

It is vitally important that the axle hitch be properly installed. An improperly installed axle hitch could come loose while riding and cause accidents with serious injury or death.

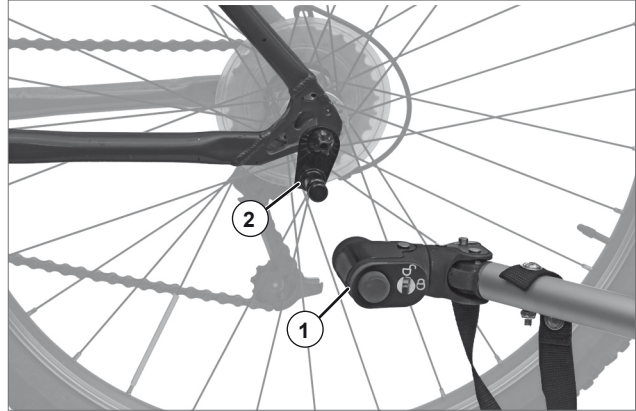


Installing the axle hitch to a bicycle with a quick-release axle


The quick-release lever (1) must be positioned on the right side of the bicycle (relative to the direction of travel). If the lever is on the left side, the quick-release skewer must be removed and reinserted from the right side. Be sure to follow the applicable instructions in the owner's manual of the bicycle and/or consult a professional bicycle mechanic.

Tip: *If the bicycle wheel is equipped with a thru axle (with quick release lever) instead of a conventional quick-release skewer, the thru axle must be replaced with the Croozer Thru Axle available as an accessory. Other hitch axles are also available as accessories.*

1. Open the quick-release lever (1) on the rear wheel of the towing bicycle or loosen the Allen bolt (5 mm), depending on the type of quick-release skewer. Often, the open position is indicated on the lever by the word "OPEN". In this case, when the word "OPEN" can be seen, the lever is in the open position.

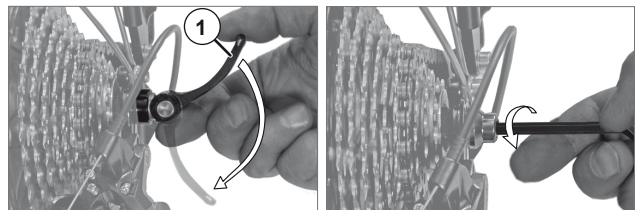

2. Remove the axle nut (2) of the quick-release skewer by turning the nut anticlockwise. Use caution: the spring located just beneath the nut is under tension and could fly off when removing the nut.

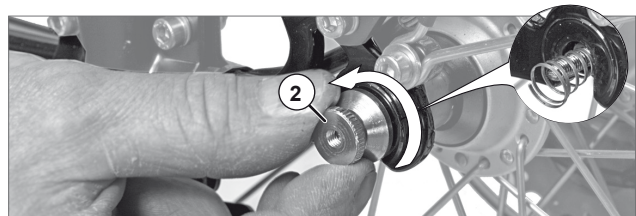

Preparing the Croozer for Use as a Cargo Trailer

- Fit the axle hitch (3) over the end of the quick-release skewer without removing the spring.
- Thread the axle nut (2) back onto the skewer. Tighten the axle nut at least five full turns (clockwise).



WARNING!

The axle nut must engage the threads for at least five full turns in order to ensure adequate clamping force for holding the rear wheel securely. Failure to tighten the axle nut adequately may result in accidents with serious injury or death. If the quick-release skewer is too short, it must be replaced. Consult a professional bicycle mechanic for the appropriate parts and assistance.

- Check that the rear wheel is properly aligned, adjusting the position if necessary; then close the quick-release lever (1) or tighten the hex bolt, depending on the version. Often, the closed position is indicated on the lever by the word "CLOSE". In this case, when the lever side marked "CLOSE" can be seen, the lever is in the closed position. If the axle nut has been tightened the proper amount, you will be able to feel the resistance increase when the lever is about halfway closed, i.e. parallel to the axle. The adjustment is correct if you can fully close the lever but with considerable force. In the closed position, the lever should be parallel to the frame, i.e. it should not stick out to the side.
- Check whether the quick-release skewer is securely engaged by trying to rotate the quick-release skewer without opening the lever.

If the quick-release skewer is loose enough to rotate, then the clamping force is inadequate. In this case, open the lever, and tighten the tension-adjusting nut half a turn clockwise. Repeat steps 5 and 6.

If it is impossible to push the quick-release lever into the closed position, then open the lever, and unscrew the tension-adjusting nut half a turn anticlockwise. Repeat steps 5 and 6. Keep in mind that the tension-adjusting nut must engage the threads of the quick-release skewer for at least five full turns.



WARNING!

The tension-adjusting nut must engage the threads for at least five full turns in order to ensure adequate clamping force for holding the rear wheel securely. Failure to tighten the tension-adjusting nut adequately may result in accidents with serious injury or death. If the quick-release skewer is too short, it must be replaced. Consult a professional bicycle mechanic for the appropriate parts and assistance.





Tip: If there is not enough space for mounting the axle hitch or if the skewer threads are too short, then you can replace the original skewer with a Croozer Click & Crooz® Quick Release Skewer with integrated hitch, which is available as an accessory.

- Finally, hold the rear wheel with both hands and try to rock it back and forth to check that the wheel is held securely in the dropouts.



WARNING!

The rear wheel of the towing bicycle must be properly attached after the axle hitch has been installed. Riding with an improperly installed rear wheel can result in accidents with serious injury or death. Follow the instructions given in the owner's manual of the towing bicycle.

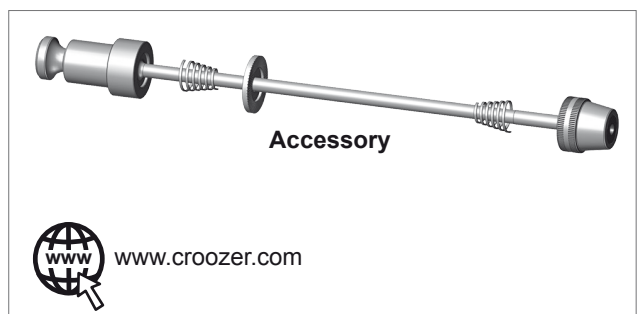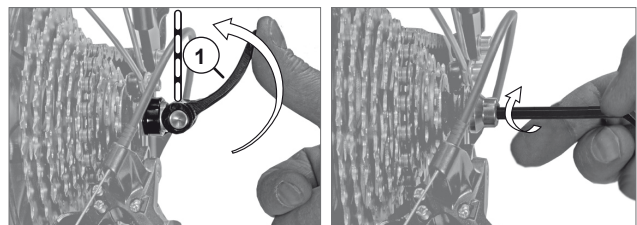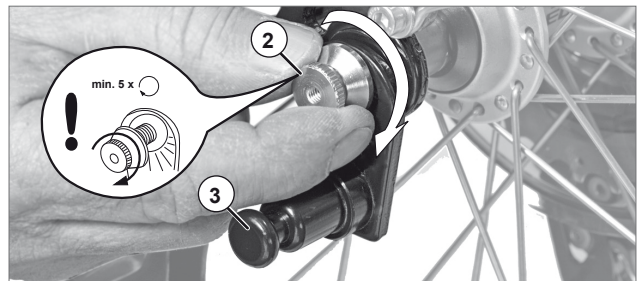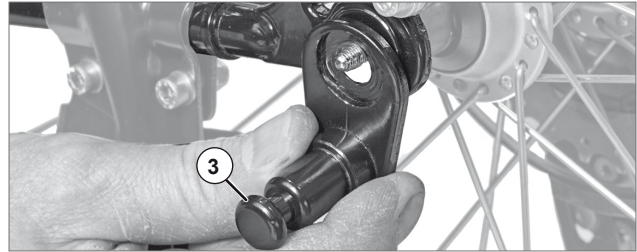

Installing the axle hitch to a bicycle with a solid axle

1. Remove the axle nut (1) on the left side of the solid axle by turning it anticlockwise.



WARNING!

It is vitally important that you leave the retaining washer (2) on the axle. This washer prevents the axle from rotating in the dropouts. Riding without the retaining washer can result in accidents with serious injury or death.

2. Without removing the retaining washer, place the axle hitch (3) onto the axle by feeding the end of the axle through the hole in the hitch.

3. Screw the axle nut (1) back onto the solid axle, tightening at least five full turns.



WARNING!

The axle nut must engage the threads for at least five full turns in order to ensure adequate clamping force for holding the rear wheel securely. Failure to tighten the nut adequately may result in accidents with serious injury or death. If it is not possible to tighten the nut at least 5 full turns, then the axle is too short, and the Universal Hitch cannot be used! Consult a professional bicycle mechanic for the appropriate parts and assistance.






4. Check that the rear wheel of the towing bicycle is properly centred, adjusting the position if necessary; then tighten the axle nut using the tightening torque specified in the owner's manual of the towing bicycle. Be sure to hold the axle hitch in place while tightening the nut.
5. Finally, hold the rear wheel with both hands and try to rock it back and forth to check that the wheel is held securely in the dropouts.



WARNING!

The rear wheel of the towing bicycle must be properly installed after the axle hitch has been mounted. Riding with an improperly installed rear wheel can result in accidents with serious injury or death. Be sure to follow the instructions given in the owner's manual of the towing bicycle. When in doubt, consult a professional bicycle mechanic.

Tip: If there is not enough space for mounting the axle hitch or if the threads of the axle are too short, then you can replace the original axle nut with a Croozer Click & Crooz® Axle Nut Hitch, which is available as an accessory.

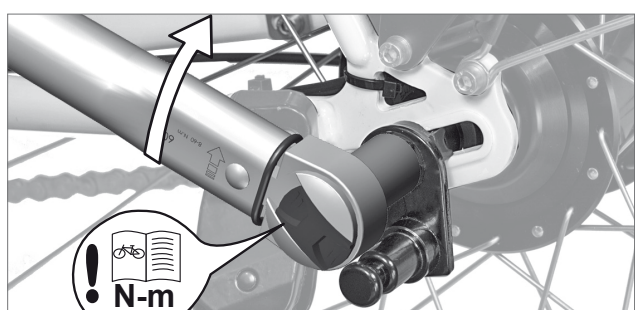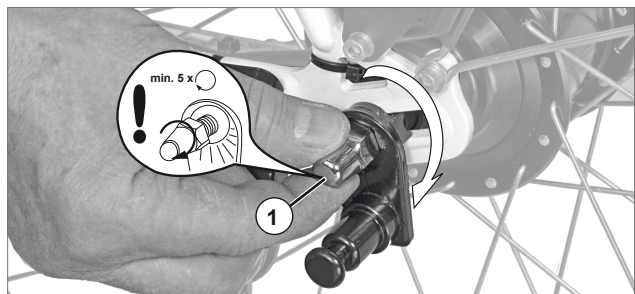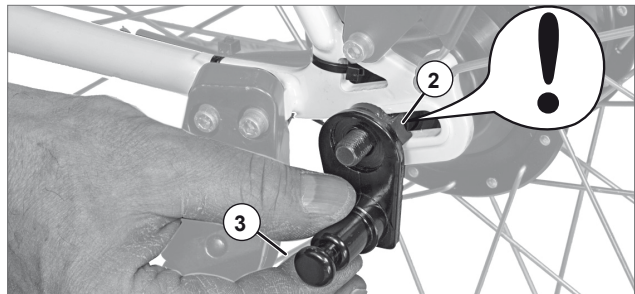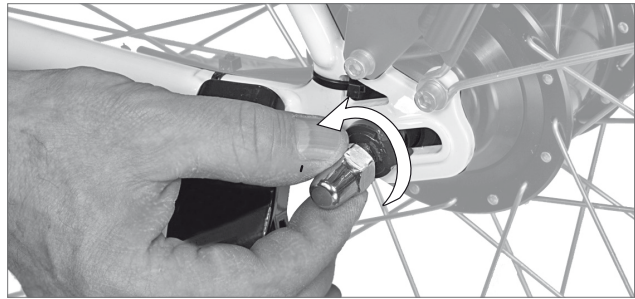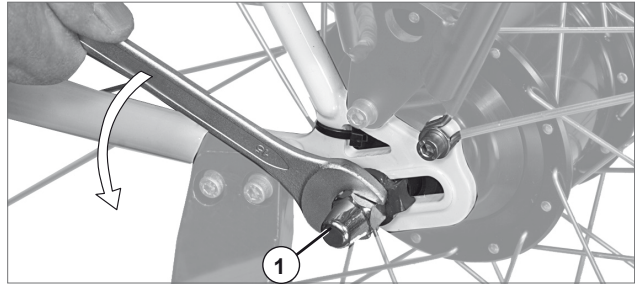

Accessory



www.croozer.com



Preparing the Croozer for Use as a Cargo Trailer

Installing the safety flag

Never use the Croozer as a Cargo Trailer without the safety flag in place. The safety flag makes it easier for other road-users to see the Croozer Cargo, increasing your safety and the safety of other road-users.

For the attachment of the safety flag, there is a loop (2) and a canvas sleeve (3) on the left side of the Croozer Cargo.

1. Assemble the flag pole (1) by connecting the two sections of the pole.
2. Slide the flag pole through the loop (2) and into the canvas sleeve (3).



WARNING!

When pulling the Croozer Cargo as a Cargo Trailer, the safety flag must be properly installed at all times. If the safety flag is not properly installed, other road users may fail to see the Croozer Cargo, which could result in accidents with serious injury or death.

NOTICE

The flag pole must always be inserted through both the loop (2) and the canvas sleeve (3). Otherwise, the flag pole could fall off while riding.



Using Your Croozer Cargo

Transporting cargo

Load capacity and cargo compartments

The cargo area (1) of the Croozer Cargo offers enough space for larger cargo items.

Distribute the load evenly, and make sure that heavy items are centred over the axles of the side wheels (5). An unbalanced load has a negative effect on the handling of the Cargo Trailer.



WARNING!

Be sure to properly secure all cargo items inside the Croozer Cargo. Cargo items can shift during transport, resulting in sudden changes in weight distribution. Never transport objects that are too large to fit completely into the cargo area of the trailer. Never attach cargo, such as bags or panniers, to the outside of the Cargo Trailer. Shifting weight can cause erratic handling, which can lead to accidents with serious injury or death.

When using the Croozer Cargo, never exceed the weight limits specified below:

Maximum Load* (Cargo)	40 kg (88 lb)
* Weight limits only apply if the hitch-arm load is within the specified range of 3 to 11 kg (6.6 to 24.3 lb). See below.	



WARNING!

Never overload the trailer and never ride with a hitch-arm load that is outside the specified range of 3 to 11 kg (6.6 to 24.3 lb). Always distribute the load evenly. Failure to do so could compromise the handling properties and cause accidents with serious injury or death.



Proper weight distribution and hitch-arm load

For safe handling, the weight on the hitch connector should be between 3 and 11 kg (6.6 and 24.3 lb); the hitch-arm load (nose weight) is associated with an even distribution of weight in the trailer.

If the centre of gravity is too far forward, the hitch connector will be overloaded. If the centre of gravity is too far behind the wheels, the rear wheel of the towing bicycle could lose traction, especially when making turns. If the centre of gravity is too far right or left, the trailer has a stronger tendency to tip over when making turns. Check the weight on the hitch connector before using the Croozer Cargo as a Cargo Trailer.

Follow these steps, using your bathroom scales, to determine the weight on the hitch connector:

1. Place your bathroom scales beside the hitch arm of the loaded and unhitched trailer.
2. Step onto the scales and make a note of your weight.
3. Now, while standing on the scales, lift the hitch connector of the hitch arm about 30 cm (1 foot) off the ground.
4. The weight shown on the scales should be 3 to 11 kg (6.6 to 24.3 lb) more than your own weight.

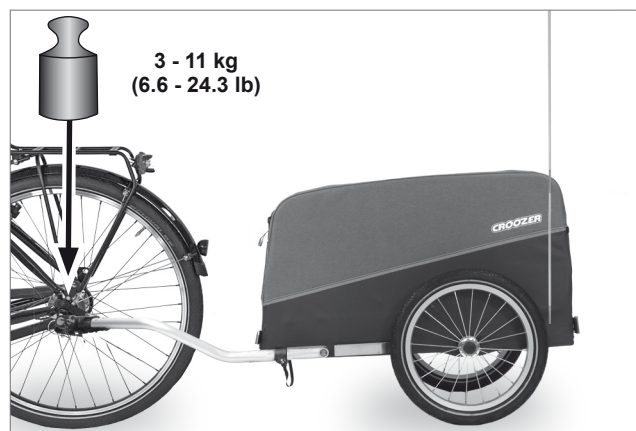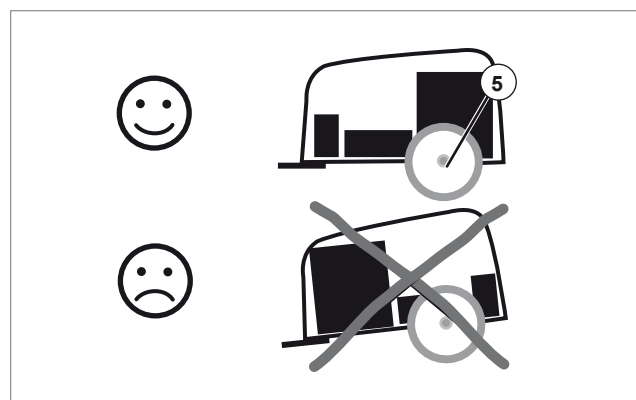

Using Your Croozer Cargo

Opening and closing the cover



The cover not only protects the cargo items inside the Croozer Cargo from dust, light rain and inquisitive eyes but also prevents cargo from falling out of the trailer.

1. Open the two zippers (1).
2. Insert the cover (2) into the pocket (3) at the rear of the Cargo Trailer so that it does not get in the way when loading the trailer or is not damaged when riding with an open cover.

NOTICE

Always insert the cover (2) into the pocket (3) when riding with an open cover. Otherwise, the cover could get damaged by coming in contact with the road or the wheels.

3. To close the cover, follow these instructions in the reverse order.

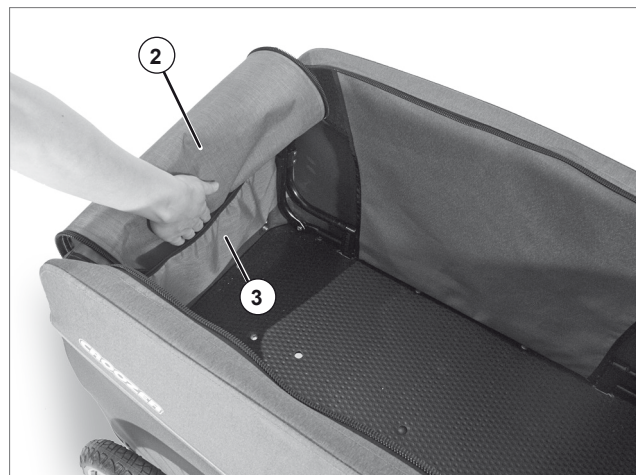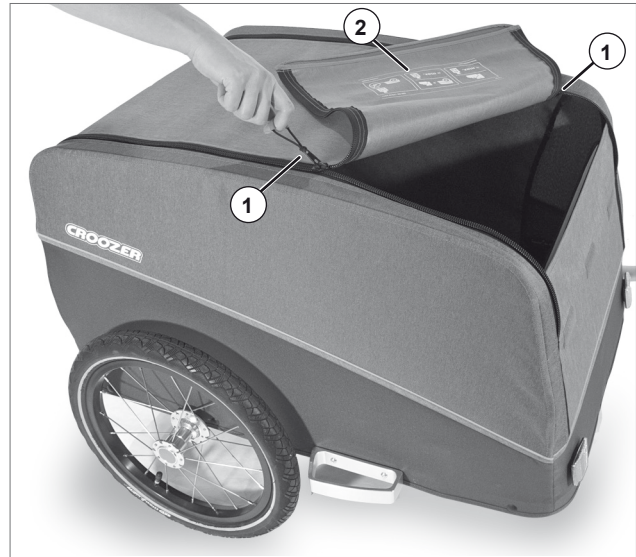

Hitching the Croozer to the towing bicycle

WARNING!

It is vitally important that you check whether the towing bicycle has been approved by its manufacturer for pulling a trailer. Towing a trailer with an unsuitable bicycle can result in frame breakage and accidents with serious injury or death.

1. Lift the hitch arm of the Croozer, and push the hitch connector (1) as far as it will go onto the axle hitch (2) that has been installed on the towing bicycle. You should hear a click and be able to see that the axle hitch is securely engaged in the hitch connector. Pull gently on the hitch connector to ensure that it is locked securely to the axle hitch.





WARNING!

Always check to make sure that the axle hitch is locked securely in the hitch connector. If the axle hitch is not locked securely in the hitch connector, the Croozer could become unhitched while riding, resulting in accidents with serious injury or death.

2. Wrap the hitch-arm safety strap (5) around the seat stay of your bicycle, and push the pin (4) into the hole (8) until you hear it click into place. Pull on the pin to make sure that it is locked securely in the hole.

NOTICE

The front part of the hitch-arm safety strap is elastic. After the hitch-arm safety strap has been wrapped around the seat stay and the pin has been inserted into the hole, the strap should be under slight tension so that it cannot come in contact with moving parts. If the hitch-arm safety strap is not wrapped around the seat stay correctly, it could be destroyed by rotating parts like the spokes, hub or disc brake while riding.

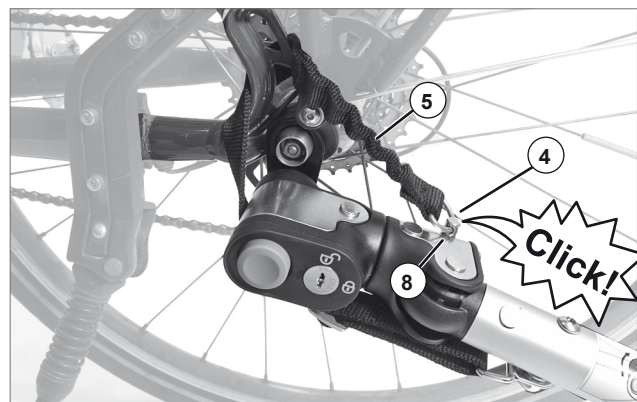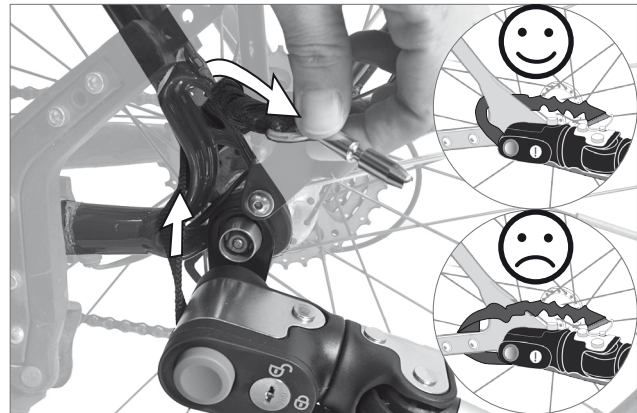

Tip: The length of the hitch-arm safety strap can be adjusted. The hitch-arm safety strap must be adjusted to the shortest possible length so that it cannot come in contact with the spokes, hub or disc brakes. Check, and if applicable readjust, the length of the hitch-arm safety strap if you attach the hitch arm to another bicycle.



Using Your Croozer Cargo



WARNING!

Never pull the Croozer as a Cargo Trailer with a defective hitch-arm safety strap or without the hitch-arm safety strap securely fastened to the towing bicycle. The safety strap ensures that the Croozer would remain connected to the towing bicycle if the hitch connector were to fall off the axle hitch. Failure to keep the safety strap mounted can result in serious injury or death.

4. In order to prevent theft or the unhitching of the Croozer from the towing bicycle by an unauthorised person, the hitch connector is equipped with a hitch lock. This mechanism makes it possible to lock the Croozer to the towing bicycle.

Locking: Insert the key into the lock, turn the key to the horizontal position, and remove it.

Unlocking: Insert the key into the lock, turn the key to the vertical position, and remove it.

NOTICE

Never leave the key in the lock when pulling the Cargo Trailer. The key could break off.

Tip: The hitch lock comes with three keys. If you need additional keys, you can have duplicates made by a locksmith or another key-cutting service (key blank Silca no. LS11).

Tip: If the lock becomes stiff after a while, you can lubricate the cylinder. However, it is important that you only use penetrating oil or a special spray for cleaning and lubricating locks. Conventional chain oil or grease will collect dirt and “gum up” the lock cylinder.

NOTICE

The hitch lock by itself does not adequately protect the Croozer from theft over longer periods of time. Always use one or more bicycle locks to secure both the towing bicycle and the Croozer to fixed, immovable objects, like lamp posts etc.

Tip: You can use a shackle lock or a cable lock to secure the side guards to an immovable object.



unlocked



locked



Unhitching the Croozer from the towing bicycle

1. To unhitch the Croozer, follow the instructions above in the reverse order. Unlock the hitch connector and unfasten the hitch-arm safety strap. Press the button and pull the hitch connector off of the axle hitch.

Special considerations when riding with the Cargo Trailer

Speed

When pulling the Cargo Trailer, never ride faster than its maximum allowable speed of 20 km/h (12.4 mph). Always reduce your speed to a walking pace when turning. Keep in mind that riding speed is often underestimated, especially on bikes with electric assist, which require less muscle power.



WARNING!

Riding too fast could cause the Croozer to skid or even tip over, resulting in accidents with serious injury or death.

Load capacity

Never transport more than the specified load capacity. Furthermore, never ride with less than 3 kg (6.6 lb) or more than 11 kg (24.3 lb) of weight on the hitch connector (nose weight). See section “Proper weight distribution and hitch-arm load” on page 15.



WARNING!

NEVER OVERLOAD THE CROOZER. Doing so can severely affect the Croozer's handling and cause accidents with serious injury or death.

Riding in conditions of poor visibility

If you plan to use the Croozer Cargo as a Cargo Trailer at night, dusk or dawn – or when visibility is in any way reduced – the trailer must be equipped with a lighting system. Battery-powered LED lights, for example, are commonly used lighting options. The tail light is mounted to a loop (1) at the top left of the rear panel.



WARNING!

Never use a trailer without lighting at night, dusk or dawn – or whenever visibility is in any way reduced. Other road-users may not be able to see you, which could result in accidents with serious injury or death.

Tips for the towing bicycle

- For towing the Cargo Trailer, we recommend using a bicycle with multiple gears. The more speeds the bicycle has, the easier it will be to find the appropriate gear, for example, when starting, climbing hills and riding with a headwind.
- The towing bicycle must have two strong, independently operated brakes that are not only in perfect working order but also work effectively in wet weather conditions. This is absolutely essential, as the brakes must be able to stop the bike with the additional weight of the trailer.
- The towing bicycle must have a sturdy, rear-mount kickstand able to hold the bicycle firmly upright to guarantee safety and comfort when loading and unloading cargo. Single-legged kickstands mounted in the middle of the bicycle, under the bottom bracket, are NOT suitable because the weight of the hitched Cargo Trailer, which rests on the rear axle, would make the parked bicycle unstable. Consult a bicycle shop for assistance in choosing the right kickstand.




Using Your Croozer Cargo

- We recommend riding with a rear-view mirror on the towing bicycle. A rear-view mirror makes it easier to keep an eye on the vehicles behind you so that you can react appropriately. Always ride defensively. The towing bicycle should have a long rear mudguard with a mud flap to protect the Cargo Trailer from dirt thrown up by the rear wheel of the towing bicycle.

Tips for riding with the Trailer

- When pulling a loaded trailer, the handling, balance and performance of the towing bicycle will be affected, especially when starting, braking, turning and riding downhill. Prior to your first trip, we recommend taking a practice ride without cargo in a calm, traffic-free area. This is a great way to acquaint yourself with the handling of the bicycle and the dimensions of the trailer.
- The safety flag on the long, vertical pole will make you more visible to other road-users. Never ride without the safety flag properly mounted.
- Cyclists should always use available bike paths or lanes, even when pulling a trailer. Be especially careful when riding on narrow bike paths or lanes, as well as on paths and trails with two-way traffic. The Cargo Trailer is wider than the handlebars of most towing bicycles, and in most cases, the Cargo Trailer will not be centred behind the towing bicycle. Reduce your speed in places where navigation is especially challenging; and if you are ever in doubt about whether the trailer will be able to fit through an opening, dismount and push the bike and trailer through.
- Reduce your speed when riding on paths or streets with bumps or uneven surfaces. Reduce your speed when turning. Otherwise the centrifugal force could cause the Cargo Trailer to tip over.
- The Cargo Trailer requires a wide turning radius in both directions. Do not turn sharply. When turning left, keep in mind that the angle between the rear wheel of the towing bicycle and hitch arm of the Cargo Trailer must never be greater than 90°. Turning at sharper angles could damage the hitch connector (2). Be extremely cautious when turning right, as sharp right turns (3) can cause the rear wheel of the towing bicycle to hit the hitch arm, potentially damaging the hitch arm and/or the rear wheel of the towing bicycle (4).
- When pushing the towing bicycle backwards, keep in mind that the angle (1) between the rear wheel of the towing bicycle and the hitch arm of the Trailer must never be greater than 90°. The hitch connector (2) could be damaged if bent beyond this angle. When manoeuvring backwards, it is advisable to lift up the rear wheel (5) of the towing bicycle or, ideally, the whole bicycle.
- If you are planning a cycling trip with the Cargo Trailer in another country, be sure to familiarise yourself in advance with the legal requirements that apply in the regions or countries you intend to visit. Some countries do not permit the use of bicycle trailers, and others impose certain age restrictions for their use.
- The equipment legally required for bicycle trailers varies from country to country, and sometimes even from state to state. Be sure to observe and comply with the laws that apply in the country or state in which you will be using the Croozer Cargo.

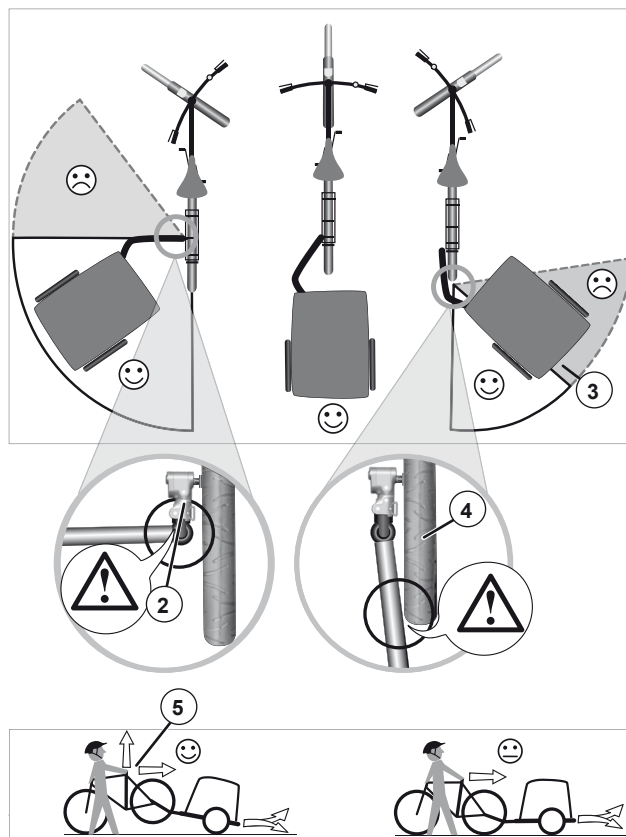

Transporting Your Croozer Cargo

The Croozer Cargo can be folded to a compact size for transport.

1. Before folding, remove all non-component items from the Croozer Cargo.
2. Remove the hitch arm and safety flag.
3. Remove the side wheels. See page 9.
4. Place the cardboard discs from the original Croozer packaging materials over the wheel axles. Then insert the wheel axles into the holes in the floor of the trailer in order to save space and prevent them from sliding around inside the Croozer Cargo. Place all other removed parts inside the cargo compartment. Use packaging material for padding if desired.
5. Rotate the fabric (1) around the top frame tubes to the outside in order to reduce the tension in the side panels when folded. Place the cover inside the trailer and fold down the sides of the Croozer Cargo. See instructions on page 8.
6. The Croozer Cargo is now ready for transport in a vehicle.

NOTICE

Check that no sharp objects are positioned in such a way that they could damage the fabric body during transport. Use padding material.

NOTICE


Never transport the Croozer Cargo – even when folded – on the roof of a motor vehicle, as this could damage the fabric body.

Tip: *Use caution when placing the folded Croozer into the trunk of a car or laying it on the floor of a room, because the exposed metal parts beneath the Croozer could damage the surface it is placed on.*

7. For air travel etc., we recommend packing the folded Croozer Cargo in its original box. Use padding material so that the Croozer cannot move around inside the box.

NOTICE

Check that no sharp objects are positioned in such a way that they could damage the fabric body during transport. Use padding material.

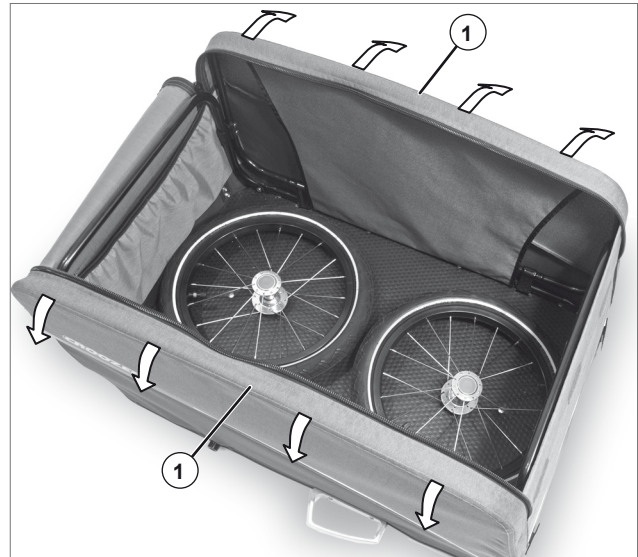

Croozer Cargo Inspections and Maintenance

To ensure that your Croozer Cargo will have a safe, long and problem-free service life, inspections and maintenance must be performed at regular intervals. The Croozer Cargo's wheels, hitch arm, frame, fabric body, security pins, hitch connector and hitch must be checked periodically for damage. If any of these parts are found to be damaged, the Croozer Cargo may not be used until the damage has been properly repaired.

 **WARNING!**

Never use the Croozer Cargo if it is not in perfect working order. Damaged parts could cause accidents with serious injury or death. Therefore, be sure to have your Croozer Cargo serviced regularly – at least once a year – by a professional bicycle mechanic.

 **WARNING!**

It is vitally important that the maintenance work described in this section be performed to professional standards and at the specified intervals.

Inspection intervals

Check the overall condition of the Croozer Cargo before each use, or daily, to identify any parts in need of repair or replacement. Generally, a visual inspection is sufficient: is everything where it belongs, are there any tears in the fabric body, are any of the metal parts cracked or bent, are the tyres in good condition and properly inflated, are all security pins securely locked in the appropriate positions and, if applicable, are the accessories in perfect working order? A complete checklist for inspection is provided in the table on the right.

Service intervals

Be sure to have your Croozer Cargo serviced regularly – at least once a year – by a professional bicycle mechanic. The required frequency of maintenance will depend on various factors, such as weather conditions, road conditions, loading etc. If the Croozer Cargo is not being used very often, then an annual service by a professional bicycle mechanic is sufficient. If the Croozer Cargo is used on a daily basis, even in the winter, then we recommend having it professionally serviced more often, as the parts can wear significantly faster. Using a bike with electric assist to pull the Cargo Trailer can also subject the parts to much greater wear, meaning that shorter service intervals may be necessary.

Before each use	What should be done?
Visual Inspection by User	
Overall condition	Check for damaged parts
Fabric body	Check for tears etc.
Locking mechanisms and fastening systems	Check for proper function and whether securely locked
Hitch arm, hitch connector and axle hitch	Check for damage and proper installation
Attachment of side wheels	Check that the axles are locked securely in the axle receivers
Hitch connector and hitch-arm safety strap	Check for correct attachment
Lighting system (optional)	Check for proper function
Tyres	Check tyre pressure, and check for damage/ cracks
Quick-release axles with retaining balls and push-button pins (side wheels)	Check for proper function
Cargo weight and hitch-arm load (nose weight)	Ensure that all values are within specified limits
Safety flag on Cargo Trailer	Check that flag is installed
Towing bicycle	Check that towing bicycle is in perfect working order

Monthly*	What should be done?
Tyres	Check tyre pressure, and check for damage/ cracks, and check tread depth
Side wheel axles	Clean and lubricate retaining balls and push-button pins

Yearly*	What should be done?
Full maintenance check	Vehicle must be serviced by a professional bicycle mechanic

* depending on type and frequency of use

Inspecting the hitch arm, hitch connector and hitch

Inspect the hitch arm, hitch connector, hitch and their respective attachment sites regularly for damage. If a part is cracked, dented, bent or damaged in any way, the Croozer may not be used with the respective part until it has been replaced or repaired. Have all damaged parts repaired or replaced immediately by a professional bicycle mechanic. Check that the axle hitch is securely fastened.

Inspect the fabric body

Check the fabric body and the cover regularly for damage. Small tears or holes can be repaired. In the case of irreparable damage, the fabric body should be replaced.

Inspecting and servicing the side wheels

The wheels should be checked for trueness on a regular basis and retuned as necessary. An annual wheel inspection by a professional bicycle mechanic is usually sufficient.

Checking tyre pressure and treads

Check the tyre pressure before each use. The actual tyre pressure should never be higher or lower than the maximum and minimum inflation pressures marked on the tyre sidewall (1). Riding with under-inflated tyres can damage the tyres and rims. Over-inflation can cause the inner tube or tyre to explode. The inner tubes have Schrader valves, also known as car valves. You will need a pump with the appropriate nozzle. Never use compressed air, e.g. from a petrol station, to inflate your tyres. The rapid airflow and high pressure can over-inflate the tyres, causing the tube and/or tyre to burst.



WARNING!

Inspect the tyres periodically for adequate tread depth and any signs of damage or excessive wear. Worn-out or damaged tyres can affect the handling and even burst, which could result in accidents with serious injury or death.

Cleaning and lubricating the side-wheel axles

The side wheels are equipped with a special mechanism for easy attachment and removal. The retaining balls (1) and push-button pins (2) of the axles must be cleaned and lubricated on a regular basis.




WARNING!

The retaining balls (1) and push-button pins (2) of the axles must be cleaned and lubricated on a regular basis. Otherwise, a wheel could fall off while riding, resulting in accidents with serious injury or death.

1. Wipe off the axle with a clean cloth to remove dirt and grime.
2. If any dirt or grime remains around the push-button pin (2) or retaining balls (1), then clean them with a small brush or a clean cloth.
3. Lubricate these parts, and press the button (3) on the axle several times to distribute the lubricant evenly. The push-button pin and retaining balls must be able to move freely.
4. Use a clean cloth to wipe off any excess lubricant.

Tip: *The axle can be lubricated using a bicycle-chain lubricant.*

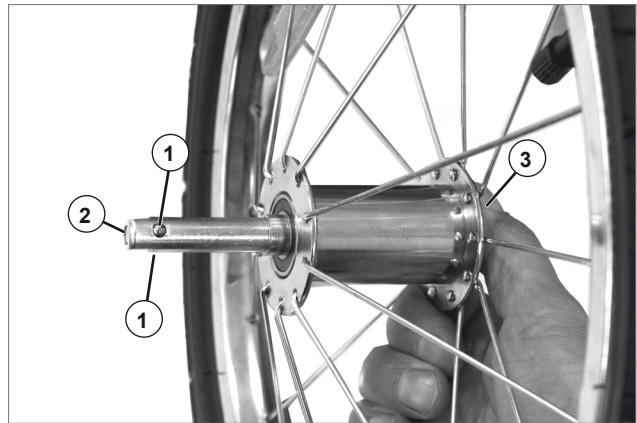

Inspecting the Croozer after an accident

If the Croozer Cargo has been involved in an accident, it must be inspected by a professional bicycle mechanic before it can be used again. Even if there is no visible damage. Accidents can leave behind tiny, and often invisible, hairline cracks in critical components whose failure would adversely affect the safety of the vehicle.

Cleaning, Maintaining and Storing the Croozer Cargo

How do I clean and maintain my Croozer Cargo?

Fabric body, frame and metal parts

Clean the fabric body and all metal parts with water, a soap solution or a mild household detergent. Use biodegradable cleaning agents whenever possible to minimise environmental impact. A soft brush can be used to clean areas of heavy soiling.

Never use solvents, such as mineral spirits, or other aggressive chemicals, as these can damage or destroy the fabric or the metal parts. Never use pressure washers. The strong water pressure could damage the fabric or force water into the wheel bearings, shortening their service life.

To protect metal parts from corrosion, a thin coat of paste wax can be applied. Preserving metal parts with paste wax is especially important if you plan to use the Croozer Cargo often in wet weather, in salty air near the sea or in the winter.

How do I store my Croozer Cargo?

General information

Store your Croozer Cargo, if possible, in a dry, warm and well-ventilated area. The minimum storage temperature is -4°F (-20°C); lower temperatures could cause the fabric to become brittle.

If you cannot store your Croozer Cargo indoors, then use a waterproof cover to protect it from the rain.

Avoid long-term exposure to direct sunlight, which will fade the fabric over time.

If possible, avoid using the Croozer Cargo in salty air, e.g. near the sea, or during winter months on salted roads, as the salt can corrode metal parts. To protect these parts from corrosion, apply a thin coating of paste wax to all metal surfaces.

Cleaning, Maintaining and Storing the Croozer Cargo

Long-term storage

If you will not be using your Croozer Cargo for an extended period of time, for example over the winter months, then prepare the vehicle for storage as follows:

1. Clean the Croozer Cargo thoroughly as described above.
2. Allow the Croozer Cargo to dry completely, and apply paste wax to protect metal parts from corrosion.
3. Store the Croozer Cargo in a dry, dust-free and well-ventilated room. Cover the Croozer Cargo with an appropriate sheet or tarp/tarpaulin.

NOTICE

To prevent mildew and mould growth, the Croozer Cargo must be completely dry and clean before being put into storage.

Tip: *To save space, the Croozer Cargo can be stored in its folded state.*

4. Inner tubes will slowly lose pressure over time. Storing the Croozer Cargo on flat tyres for an extended period of time could damage the tyres. Therefore, if you plan to store the Croozer Cargo for several weeks or months, it should be either propped up with its wheels off the ground or hung from a wall or ceiling. Otherwise, check the tyre pressure periodically, and keep the tyres inflated.
5. Before using your Croozer Cargo after a long period of storage – for example, if you have stored it over the winter – check that it is in perfect working order, and have it serviced by a professional bicycle mechanic.

Preparing the Croozer Cargo for disposal

Croozer products are extremely durable and robust. However, if the Croozer Cargo must be disposed of, e.g., owing to severe damage etc., then contact your Croozer dealer, who can help you dispose of the Croozer, or individual parts, in an environmentally sound manner. Furthermore, be sure to dispose of any worn parts, such as tyres, in an environmentally sound manner. When in doubt, consult a Croozer dealer.

Tip: *The fabric of the Croozer Cargo body is not, in itself, an ideal medium for the growth of mould and mildew. Moulds feed off organic matter in the fabric, e.g. food residues, dirt etc., and grow best in warm, damp and humid conditions. Therefore, it is very important that you follow these storage guidelines to prevent mould growth.*

However, if you do happen to find mould or mildew on your Croozer Cargo, it can be cleaned in mild cases, using a mild alcohol-based cleaning agent, 5% household vinegar or a 5% sodium bicarbonate solution from the pharmacy. NEVER USE HARSH CHEMICAL FUNGICIDES. For severe cases of mould or mildew, the fabric body must be replaced. Contact a Croozer dealer for assistance.

Technical Data

Dimensions and Weight of Empty Chassis	see catalogue or www.croozer.com
Maximum Weight of Loaded Trailer (Trailer + Cargo)	50 kg (110 lb)
Maximum Load* (Cargo)	40 kg (88 lb)
Maximum Speed with Trailer Maximum Speed with Handcart (accessory)	25 km/h (15 mph) 7 km/h (4.3 mph)
Minimum Temperature for Use/Storage	-20°C (-4°F)
Wheel/Tyre Size	16", 47-305 (16 x 1.75 inch)
Recommended Tyre Pressure	Minimum and maximum values marked on tyre sidewall
Valves	Schrader (car valve)
Size of Handcart wheel (accessory Handcart Kit)	8"

* Weight limits only apply if the hitch-arm load is within the specified range of 3 to 11 kg (6.6 – 24.3 lb).
See page 15.

Accessories

Several accessories are available for making the Croozer Cargo even more versatile and easy to use. All accessories can be purchased from a Croozer dealer or the Croozer online shop: www.croozer.com.

Handcart Kit



Click & Crooz® Universal Hitch

For an additional towing bicycle



Click & Crooz® Axle Nut Hitch

 


Click & Crooz® Thru Axle Hitch

In various lengths and thread sizes



Quick-Release Skewer with integrated Click & Crooz® hitch



More accessories can be found at



[croozer.com](http://www.croozer.com)

Warranty

Warranty

In addition to the statutory warranty under the contract of sale, Croozer GmbH, Cologne, extends to the end customer the following manufacturer's warranty for its "Croozer Cargo" bicycle trailers, subject to the conditions set forth below.


Our warranty applies to defects in materials or workmanship of the safety frame of our "Croozer Cargo" bicycle trailers. The safety frame is shown in black in the illustration on the right. The warranty period is 10 years from the date of purchase of the respective Croozer by the original purchaser.

Warranty claims must be accompanied by the sales receipt with the date of purchase, as well as the Croozer itself.

Croozer GmbH will, at its election, pursuant to its obligations under this warranty, repair or replace the safety frame of the bicycle trailer, refund the purchase price or replace the entire vehicle.

For the purposes of this manufacturer's warranty, you are considered the original purchaser if you are the "natural person" who first purchased the bicycle trailer. Persons who purchased the bicycle trailer in order to resell it or use it in the context of any commercial or self-employed professional activity are not considered the original purchaser in the sense of this warranty.

In addition to the rights set out in this manufacturer's warranty, you also have statutory rights, in particular warranty rights. These statutory rights, which in some cases may be more favourable to you, are not affected by this warranty. This warranty does not affect your rights against the seller from whom the product was purchased.

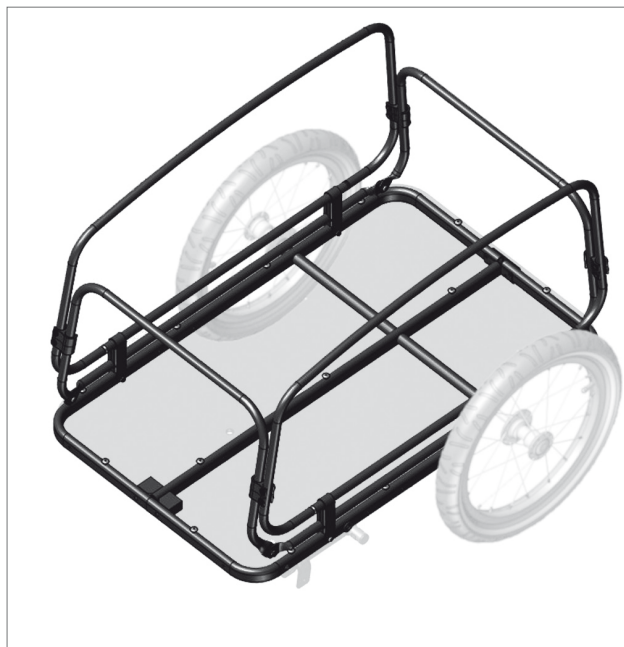

Servicing and warranty claims

If you notice any issues with the Croozer Cargo, contact the dealer from whom you purchased your Croozer Cargo to discuss a possible servicing or warranty claim. The dealer will either help you directly or forward your claim to us. In order to process your claim, we – and/or your dealer – will need the original sales receipt and the serial number of your Croozer Cargo.

You can find the serial number on the bottom of the frame at the front left of the trailer.



CONTACT

Croozer GmbH
Oskar-Jäger-Straße 125
D-50825 Cologne
Germany
info@croozer.com
www.croozer.com

The logo for CROOZER, featuring the word "CROOZER" in a bold, italicized, sans-serif font. The letters are white with a thick black outline and are set against a black background. A registered trademark symbol (®) is located to the upper right of the final letter 'R'.

www.croozer.com